

# Quick Installation Guide

## SDSL SFP Module



 
### <Quick Installation>

#### SDSL Interface Pin Assignments (RJ-45)


The SDSL interface is a standard eight-pin modular jack. The table below displays the pin out assignment.

Pin Number	Description	Top View 1~8
1	Not Used	
2	Not Used	
3	Not Used	
4	Analog Input	
5	Analog Input	
6	Not Used	
7	Not Used	
8	Not Used	

LED1 (Orange):  
CO/RT Indicator



 LED2 (Green):  
DSL Link Status Indicator



**CAUTION!** The device gets hot while operating, do not touch it directly with your hands.

#### STEP 1:

Insert SDSL SFP Module (RT) to host device. LED1 turns orange as an indicator of RT. Check for physical connection – you shall see LED2 flashing green slowly as soon as you insert your device.

#### STEP 2:

Insert SDSL SFP Module (CO) to host device. Check for physical connection – you shall see LED2 flashing green slowly as soon as you insert your device.

#### STEP 3:

Link time takes about 60 secs. Fast flashing green LED2 indicates DSL training. LED2 on both SDSL SFP Modules (CO & CPE) stays green when devices link up.

LEDs display behaviors

LED	Color	Active	Description
LED1	Orange	off	CO side
		on	RT side
LED2	Green	off	No DSL connection
		blinking	DSL trying to train
		on	DSL link is on